

ECOUSTIC® BAFFLE INSTALLATION + CARE



ECOUSTIC® BAFFLE INSTALLATION INSTRUCTIONS - SOLID COLOR

Baffle extrusions are available in lengths of 106.3" or 47.2" for nominal .47" & .94" baffle thicknesses.

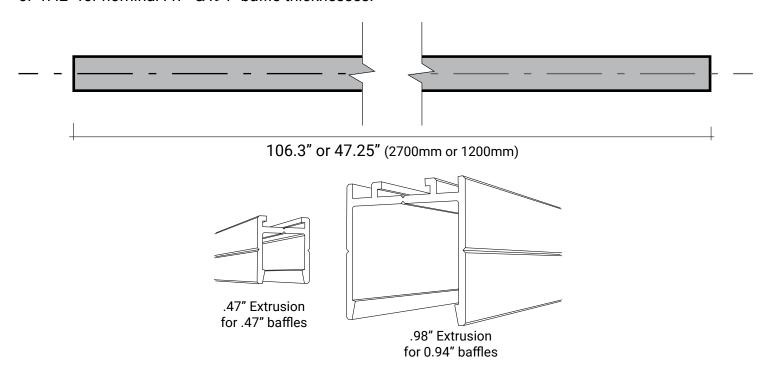


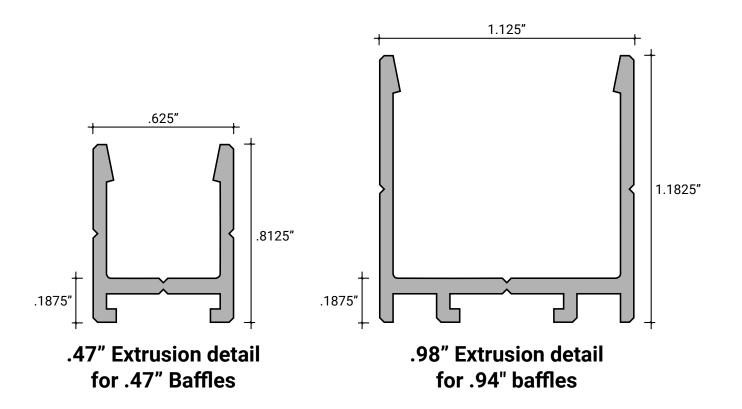



ECOUSTIC® BAFFLE INSTALLATION INSTRUCTIONS - SOLID COLOR

Assembly Options - Connecting Baffle To Extrusion

Weight Rating: Maximum weight rating per baffle extrusion with all hardware options: 44 lbs

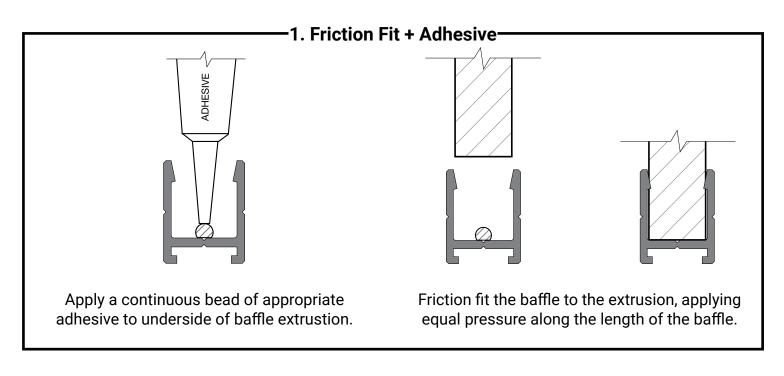

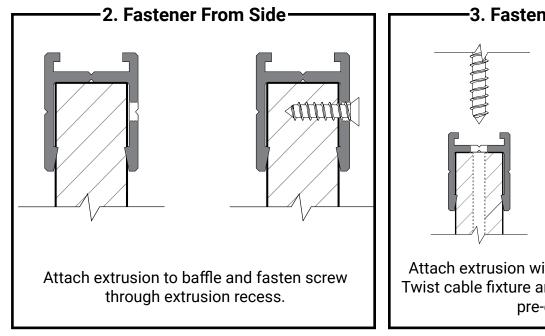


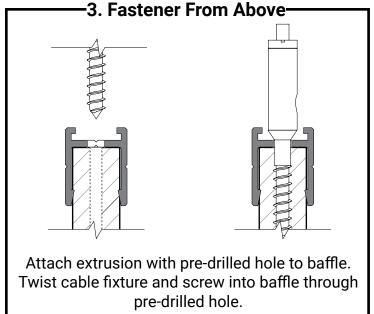

A STRUCTURAL ENGINEER'S SAFTEY CERTIFICATION IS RECOMMENDED FOR ALL OVERHEAD INSTALLATIONS



CEILING SUSPENSION LOCATION GUIDE - SOLID COLOR

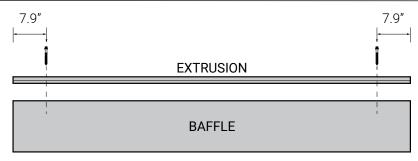

Suspension points should be placed a minimum of 7.9" (200mm) from either end of the baffle.


VERTICAL CABLE INSTALLATION OPTIONS

-Option A - ecoustic® Baffle Screw Fix-


Follow assembly option 3, attach cable fixture to exposed screw head before fastening the screw into the baffle.

Push and hold down the cable clutch while threading the cable through to the desired length.

Cut any excess cable.

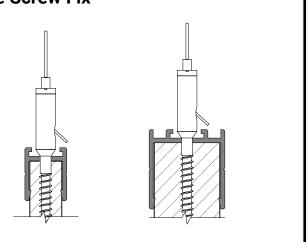

Option B - Sliding Cable Mount Via Extrusion

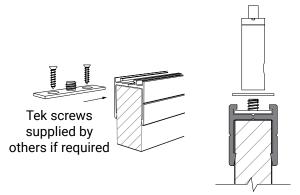

After extrusion is secured to baffle, insert sliding rail intoextrusion. Secure cable fixture to exposed screw head with supplied washer between.






Push and hold down the cable clutch while threading the cable through to the desired length. Cut excess cable. Same process for .47" + .94" baffles. Slide cable clutch and rail to desired baffle location and secure.




SUSPENDED TEE BAR INSTALLATION - SOLID COLOR


Tee Bar Installation

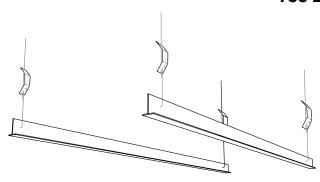


Install 'tee' bars to manufacturer's specification at desired level. Minimum two 'tee' bars per baffle span.

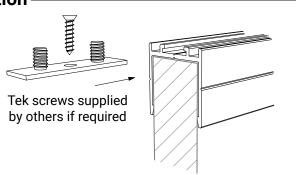


After extrusion is secured to baffle, insert sliding rails into extrusion.

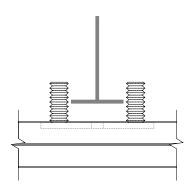


Slide baffle assembly onto ceiling 'tee' bar ensuring 'tee' bars are centered between mounting studs.

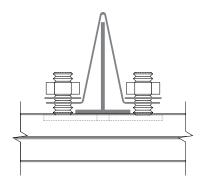

Place collars over 'tee' bars and mounting studs. Screw hand tighten nuts and washer over mounting studs.

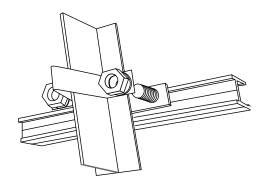


Slide collar and rail along extrusions, and baffle assembly along 'tee' bar to desired location. Tighten nuts over collar to lock baffle in position.

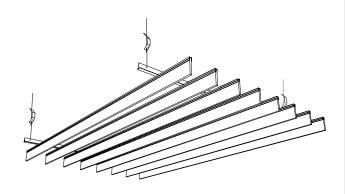



Completed assembly

DIRECT FIX INSTALLATION - SOLID COLOR

Direct Fix Installation -

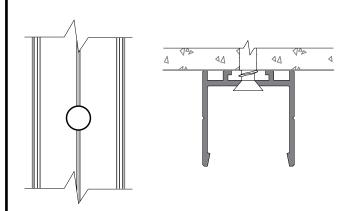




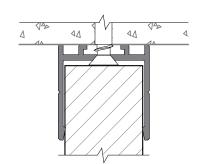


Secure baffles to extrusions using the options outlined on pages 1 and 2.

- Ceiling + Wall

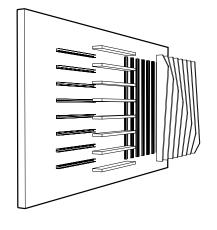

Follow the same procedure above for wall and ceiling installations of baffle


Column

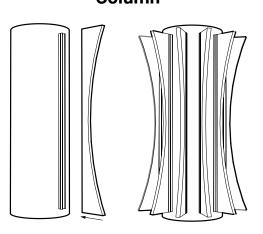


Follow the same procedure above for column installations of baffle.

ROD INSTALLATION - SOLID COLOR


-Metal Rod Installation-

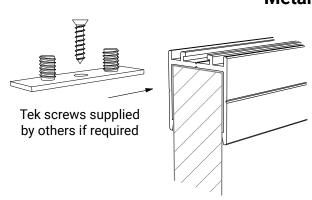


After extrusion is secured to baffle, insert sliding rails into extrusion.

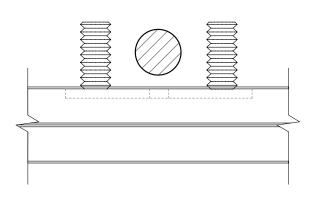

Place baffle assembly on structural rods ensuring rods are centered between mounting studs. (Minimum 2 rods per baffle span).

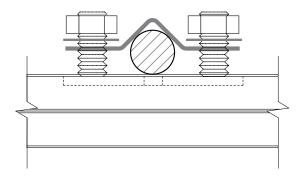

Place collars over rods and mounting studs, screw hand tighten nuts and washers over mounting studs.

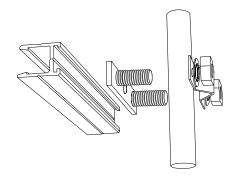

Slide collar and rail along extrusions, and baffle assembly along rods to desired location if necessary. Tighten nuts over collar to lock baffle in position.




Completed Assembly.




SLUNG CABLE SUSPENSION INSTALLATION - SOLID COLOR

-Slung Cable Installation -

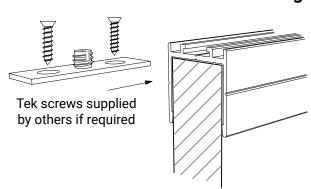


After extrusion is secured to baffle, insert sliding rails into extrusion.

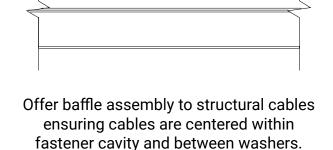


(Minimum 2 cables per baffle span).


'Cavity' for cable to pass through is .078"

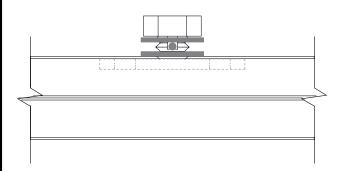

Hand tighten nuts over assembly, capturing the cable between the washers.

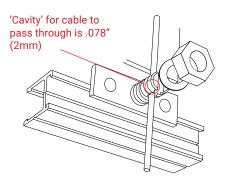

Slide rails along extrusions, and baffle assembly along cables to desired location if necessary. Tighten nuts over washers to lock baffle in position.

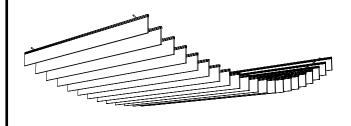


Completed Assembly.




COLLAR STRAP INSTALLATION - SOLID COLOR


Ceiling Collar Strap Installation

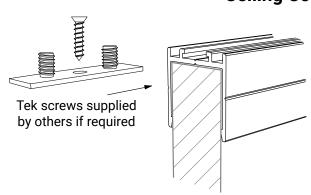


After extrusion is secured to baffle, insert sliding rails into extrusion.

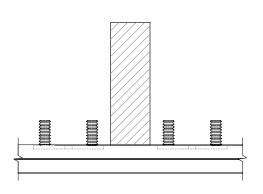


Place baffle assembly onto building structure ensuring it is centered between two sliding rails. (Minimum 2 structural components per baffle span).

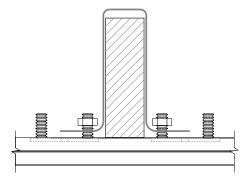

Measure and cut strap to length, place strap over structural components and mounting studs, screw hand tighten nuts and washers over mounting studs.

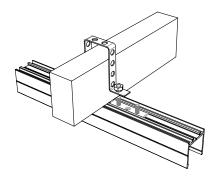

Slide strap and rails along extrusions, and baffle assembly along structural components to desired location if necessary. Tighten nuts over strap to lock baffle in position.

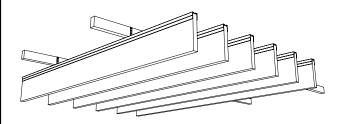

Completed Assembly.


UNISTRUT SUSPENSION INSTALLATION - SOLID COLOR


Unistrut Installation

Unistrut Connector sets will suspend one baffle. Sets contain the following:

- (A) Mount Plates (2)
- (B) Washers (2)
- (C) .25" Threaded rod cut to desired length* (2)
- (D) .25" unistrut rod coupler (2)

*Threaded rod to be supplied by others

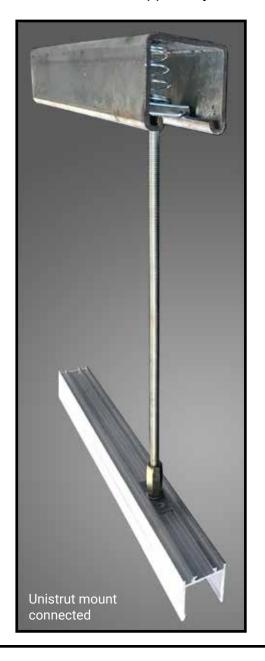

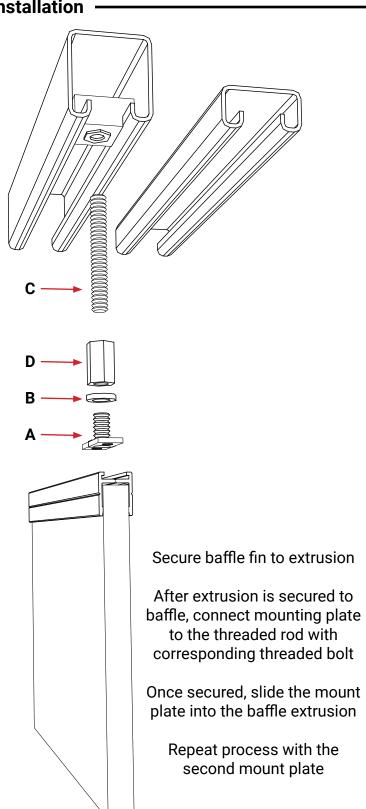



CARE - SOLID COLOR BAFFLES

Please Note

- Ecoustic® Baffles should be removed from the ceiling or wall to ensure they can be cleaned safely.
- Disassemble Ecoustic[®] Baffles in reverse sequence of the relevant assembly process mentioned above.
- It is recommended to spot clean only by a professional cleaner.

Regular Care

- Protect from direct heat and sunlight.
- To prevent dust build up, lightly dust with a soft cloth or vacuum with a soft brush attachment.

Spot Cleaning

- Professional cleaning is always recommended.
- · Always test any cleaning products on an inconspicuous area prior to commencing cleaning.
- Blot any excess spills from the material with a dry clean sponge or cloth.
- Treat all stains and spills as soon as possible.
- Most marks can be spot cleaned by lightly wetting the affected area with a mild detergent and warm water solution.
- Do not saturate the baffle panel.
- Do not scrub or abrade the fabric as this will affect the surface finish.
- Once the stain or mark has been loosened then blot the excess solution out with a dry clean cloth.
- Sponge afterwards with clean warm water and mop any excess moisture with a dry clean sponge or cloth.
- The surface can also be spot cleaned with dry cleaning fluid. Lightly sponge a small amount of dry cleaning fluid and blot.
- · Dry away from direct heat and sunlight.
- Avoid the use of carpet shampoos.

